


# **A&S Wavy User Manual**

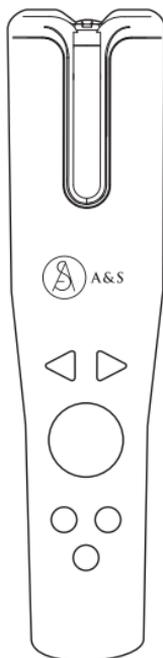

**Cordless Automatic Hair Curler**



## Contents

CONTENTS	1
IMPORTANT SAFETY INSTRUCTIONS	2
OPERATION	4
TROUBLESHOOTING	5
GETTING STARTED	6
STYLE TIP	8
USER MAINTENANCE	9
CLEANING AND MAINTENANCE	10

## IMPORTANT SAFETY INSTRUCTIONS

- When using electrical appliances, especially when children are present, basic safety precautions should be always taken, including the following:

## READ ALL INSTRUCTIONS BEFORE USING

- KEEP AWAY FROM WATER
- DANGER - Any appliance is electrically live even when the switch is off. To reduce the risk of death by electric shock:
  1. Always unplug the appliance immediately after using it.
  2. Do not use while bathing or in the shower.
  3. Do not place or store appliance where it can fall or be pulled into at a tub or sink.
  4. Do not place in, or drop into, water or other liquids.
  5. If an appliance falls into water, unplug it immediately. Do not reach into the water.

WARNING - To reduce the risk of burns, electrocution fire or injury to persons.

1. This appliance should never be left unattended when plugged in.
2. Do not pull, twist, or wrap the line cord around the appliance.
3. This appliance should not be used by, on or near children or individuals with certain disabilities
4. Use this appliance only for its intended use, as described in this manual. Do not use attachments not recommended by the manufacturer.
5. Never operate this appliance if it has a damaged cord or plug and if it is not working properly or if it has been dropped or damaged or dropped into water. Return the appliance to an authorized service center for examination and repair.
6. Keep the cord away from heated surfaces.
7. Never use while sleeping.
8. Never drop or insert any object into any opening or hose.
9. Do not use outdoors or operate where aerosol (spray) products are being used or where oxygen is being administered.
10. The unit is hot when in use. Do not let heated surface touch eyes or skin.
11. Do not place the heated unit directly on any surface while it is hot or plugged in.
12. Never block the air openings of the appliance or place on a soft surface such as a bed or couch, where the air openings may be blocked. Keep the air openings free of lint and other debris.



## READ ALL INSTRUCTIONS BEFORE USING

13. Do not use an extension cord with this appliance.
  14. Do not touch the hot surfaces of the appliance. Use handles or knobs.
  15. Do not attempt to touch the housing of your appliance near the curl chamber, as it is hot when in use.
  16. If not using the charger provided, use a charger that can provide the same rated charging voltage and current for charging.
  17. If using another charging cable, please use one that can be charged with a charging current of 2A or more.
  18. When the product is charging, do not leave it unattended. Be sure to remove the charger when it is full.
  19. Do not pull the charging cable directly.
  20. This product is for household use only,
  21. This product is not a toy. Keep away from children
- Caution: Risk of fire and burns. Do not open, crush, heat above 60°C (140°F) or incinerate.

## SAVE THIS INSTRUCTIONS

- Charging volt/current: DC 5V/2A(MAX)
  - 21700 battery cell volts: 3.6V
  - Battery capacity: 4,500mAh
1. Plug the USB cable into the USB port on a computer or into an adapter.
  2. Charge the unit continuously for 4.5 hours before your first use. After initial charge and full discharge, it should take another 4.5 hours to fully recharge your curler.
  3. The unit may become a little warm when charging or during use. This is normal.
  4. Preserving the batteries: In order to maintain the optimum capacity of the rechargeable batteries, the curler should be recharged for 5 hours approximately every 3 months.



## USER MANUAL

- Before using the supplied USB charging cord, read these instructions carefully.
- Rating required when connecting the USB port to a computer adapter:
- Rated input voltage: 100-240V AC, 50/60Hz 0.2A

## OPERATION

1. For dry location use only. Do not expose to water.
2. The unit will become warm during operation.
3. Unplug USB charging cord when not in use.

## CAUTION

1. Dry location use only, do not expose to liquids, vapor, or rain.
2. If using a USB power adapter, be sure the Type-C USB input is plugged into the unit before plugging the USB charging cord into the adapter and outlet.
3. Do not operate any appliance that has a damaged output cord or housing.
4. Always unplug the unit before cleaning or when not in use.
5. This appliance is not intended for use by persons (including children) with the reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
6. Children should be supervised to ensure that they do not play with the appliance.

## OPERATING PRECAUTIONS

- This curler has a built-in rechargeable battery. Do not burn, apply heat, charge, or use or leave in a high-temperature environment.

## TROUBLESHOOTING


- If your rechargeable curler does not seem to be taking a charge, follow these steps before returning it for repair:
  1. If using a USB power adapter in an electrical outlet, check to see if the outlet is working by plugging in another appliance to test it.
  2. Make sure the environment is not too cold or too hot.
  3. Make sure the unit is completely cool before charging.

## CURLER CHARGING PRECAUTIONS

- Avoid charging the batteries at temperatures below 41°F (5° C) or above 104°F (40°C)
- Avoid charging the batteries in direct sunlight or near a radiating heat source.
- Even though the curler may not be used for an extended period, charge once a month to preserve battery life.

## GETTING TO KNOW YOUR AUTO CURLER

- Features:
  - Auto Curl Function
  - Ergonomics Design
  - Instant Heat Up
  - Ceramic Tourmaline Technology
  - Built-In Safety Sensor
  - 2 Directions Curling

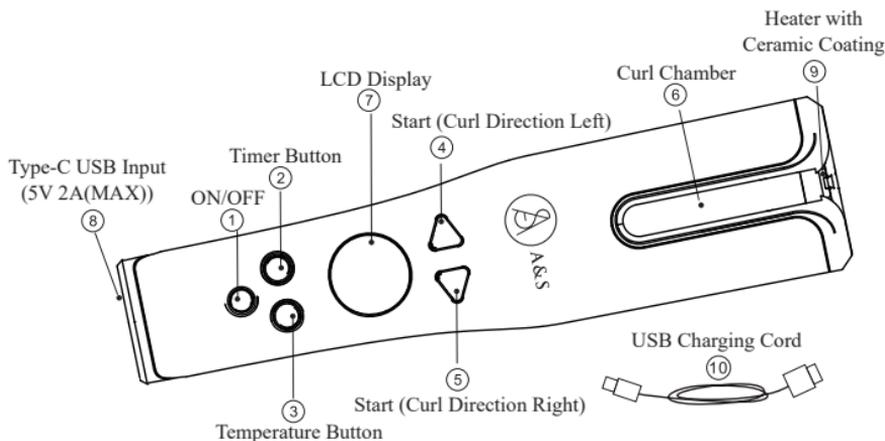

## GETTING STARTED

- Before using, fully charge the product for maximum battery performance, and always be sure to read all the instructions.
- Press and hold the ON/OFF button for 3 seconds to turn LCD display on, then press the TEMPERATURE button to turn curler on. You will hear a "beep" and the LCD display will turn on.  
 Note: Press and hold the ON/OFF button for 3 seconds to turn curler off. If you forget to turn it off, it will shut itself off automatically after 10 minutes if not used.
- Press the temperature button and timer button to choose Temperature and Timer.  
 Temperature: 165°C, 185°C, 205°C  
 Timer (seconds): 6s, 8s, 10s, 12s
- Note: Temperature digital will blink when it is heating and will stop blinking when it reaches your temperature setting.  
 The curler's three high-heat temperature settings and Instant Heat technology provide styling versatility to all hair types. If you have fine hair, the lower temperature will produce the best results. If you have thick wavy or hard-to-curled hair, keep the heat setting on high. Create a variety of curls with different combinations of heat, time, and curl direction!

## CHOOSE YOUR CURL TYPE

CURL TYPE	TEMP	TIMER
LOOSE CURLS	165°C	6 or 8
MEDIUM CURLS	185°C	8 or 10
TIGHT CURLS	205°C	10 or 12

## THE CERAMIC EASY-GLIDE AUTO STYLER

- The Auto Curler has a ceramic easy- glide coated surface. This is the newest technology, It not only makes it simpler to clean off styling product residue, etc. after each use, but you'll find that hair glides easily over the coated surface of the curl chamber. The ceramic-coated surface also helps smooth down flyaway and frizzies for added shine.
- The curler evenly distributes heat so that the style you create has a salon-perfect, silky smooth, shiny finish. And hair slips right out of the curl chamber after it's curled.
- Ceramic technology makes styling hair easier and gives you professional results.
- Never leave your curler on and unattended. However, should you fail to turn the curler off, it will shut itself off automatically within approximately 15 minutes.

## TO CURL HAIR

- Comb through to remove any tangles and divide hair into sections, no more than 1 cm wide.
- With the opening of the curl chamber facing up, lay the section of hair across the opening. Make sure the hair falls inside the curl chamber. Press the START button to activate the motor and draw hair into the curling chamber.
- When you hear a "beep" letting you know automatic curling is finished.
- To release the hair, simply pull the auto curler down and away to gently release the curl.

## STYLE TIP

- For curl that curls away from your face, use the “>” curl direction. Use “>” for styling the left side of your head. Use the “<” for the right side of your head.
- For a more natural look, use the “<” and “>” curl direction to alternate curls.

## TIPS

- Before using, fully charge the product to get the best performance.
- Before preparing to store your curler for a long time, fully charge it. Always be sure to charge it at least once every three months to keep the auto curler in the best condition.
- When the product is in the charging mode, the LCD display shows the battery indicator light, which will flash.
- When the product is fully charged and the charger is still connected, the battery indicator light remains solid.
- Note: the LCD display will be off after removing the charger if the product is off.
- When the product is charging, other functions are disabled.
- If hair becomes blocked in the curling chamber, you will hear a continuous “beep” while the auto returns to its starting position (or stops). Please remove hair from the curler.
- When the battery is lower than the factory setting, the LCD display will flash three times and the unit will automatically shut off.

## ADDED FEATURES

- The curler comes with added safety and energy savings:
- Auto Shut-Off: If the appliance is switched to ON for more than 10 minutes, it will automatically switch off. If you wish to continue using the appliance, press the ON/OFF button for 2 seconds and then press the temperature button.
- NOTE: Curl chamber will be hot to the touch.

## USER MAINTENANCE

- Your curler is virtually maintenance-free. No lubrication is needed. Keep all vents and openings clear of dirt and dust. If cleaning becomes necessary, disconnect the unit from the power source, allow it to cool and wipe the exterior with a cloth. If any abnormal condition occurs, unplug the unit, allow it to cool, and return it for repair to an authorized service representative only. No repairs should be attempted by the consumer.

## CAUTION

- NEVER allow the USB charging cord to be pulled, twisted, or severely bent. Never wrap the cord tightly around the appliance. The damage will occur at the high flex point of entry into the appliance, causing it to rupture and short circuit. Inspect the cord frequently for damage. Stop use immediately if the damage is visible or if the unit stops or operates intermittently.

## STORAGE

- This appliance comes with a heat-resistant storage pouch for use during and after styling. During use, do not place the appliance on any heat-sensitive surface, even when using the storage pouch provided and allow to fully cool down. Do not jerk or strain cord at plug connections. Do not wrap the line cord around the appliance. Allow the cord to hang or lie loose and straight at the point of entry into the appliance. Continue to keep it out of the reach of children, as it will remain hot for several minutes. Store out of reach of children in a safe, dry location.

## CLEANING AND MAINTENANCE

- Do not put this product in a dishwasher or washing machine for cleaning.
- This product does not have a waterproof function. When cleaning, care should be taken to prevent water or other liquid from entering the product from the product gap or interface, resulting in short-circuiting of the product.
- Please clean up the foreign matter such as hair and dander remaining in the curl chamber after each use.
  
- Please carry out cleaning, maintenance, and care while ensuring that the product has cooled down.
- Do not use sharp or corrosive, volatile thinner cleaners.
- Use a soft, damp cloth (a small amount of non-irritating, flammable detergent) to clean and wipe the product. When finished, dry with a soft, dry cloth.

## WARNING

- IF YOU THINK THE POWER IS OFF WHEN THE SWITCH IS OFF, YOU'RE WRONG.
- KEEP AWAY FROM THE WATER
- Everyone knows that electricity and water are a dangerous combination. But did you know that an electric appliance is still electrically live even if the switch is off? If the plug is in, the power is on. So, when you are not using your appliances, keep them unplugged.
- ALWAYS UNPLUG SMALL APPLIANCES
- Do not use this appliance near bathtubs, showers, basins or other vessels containing water.
- Burn hazard. Keep appliance out of reach from young children, particularly during use and cool down.
- Always place the appliance with the stand, if any, on a heat-resistant, stable flat surface.
- The appliance is not to be used by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction
- Children being supervised not to play with the appliance.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- Children shall not play with the appliance.
- Cleaning and user maintenance shall not be made by children without supervision.

